



Tent Chair

TENT CHAIR INSTRUCTIONS

WARNING—DANGER—READ THIS FOR YOUR SAFETY. Use caution and common sense when using this product. Failure to take safety precautions can result in **INJURY or DEATH**. Made from flammable materials that can burn when placed too close to a heat source. This product is **NOT FIREPROOF**—fabric will burn if it comes into contact with an open flame or fuel source. Do not allow children or adults to use matches, lighters, candles, heaters or other sources of fire inside or near the Tent Chair.

WARNING: The spring steel and fiberglass rods used for the tent supports are under tension when bent and can cause serious injury, damage. **USE CAUTION AND COMMON SENSE** when assembling or setting the Tent Chair up. Always wear safety glasses and keep away from the body and face when assembling or setting the Tent Chair Blind up. Failure to do so could result in **INJURY or DEATH**.

Use caution when collapsing and closing the Tent Chair. The hinged joints and spring steel roof supports can pinch, cut or seriously injure you.

The tent Chair was designed for use on the ground. Failure to do so could result in **INJURY or DEATH**.

Weight capacity of the chair is 250 pounds.

Fargason Outdoor Technologies, Inc. assumes no liability, whether expressed or implied when using this product. Use our products with caution and common sense.

Contents:

I-Tent Chair with Tent and Chair

Instructions:

TO OPEN THE TENT CHAIR:

1. Remove the blind from the carrying bag.
2. Release the nylon strap that compresses the Tent Chair for storage.
3. Stand in front of the chair and open the chair fully. Make sure the tent is not under the legs of the chair.
4. While standing in front of the chair, grab with each hand, the two (2) spring steel rods on each side of the chair's armrest.
5. Pull the two (2) spring steel rods on each side of the armrest forward at the same time (note that the tent is attached to the spring steel rods and will come forward as well).
6. The "armrest" spring steel loops will now be out beyond the backrest of the chair and the rear, single spring steel loop (attached to the backrest of the chair).
7. With the "armrest" spring steel loops out in front of the rear "backrest" spring steel loop, reach down with both hands, grab the rear "backrest" loop and pull it upright. NOTE: The "backrest" loop supports the overall frame of the Tent Chair. When the "backrest" loop is upright, there are two (2) steel sleeves, one on each side, that slide down over the spring steel at the pivoting point to secure this loop in a vertical position.
8. The tent is now upright and over the chair. Located inside the tent to your right above the armrest is a fiberglass tent rod conveniently folded and stored in a pouch sewn into the tent. Remove and assemble the fiberglass tent rod. Next, locate the black nylon inserts that are sewn inside the front and back of the Tent Chair at the roof. First insert the fiberglass rod in the **back** insert (above your head and the backrest of your chair), and then the front insert (located under the tent's **front** spring steel loop). NOTE: The fiberglass rod can then be tied to the roof with the nylon tie located in the middle of the tent's roof. This rod will hold the Tent Chair's tent fully open and extended.

TO CLOSE THE TENT CHAIR FOR TRANSPORT:

1. Carefully remove the fiberglass rod used to support the tent's roof. NOTE: The fiberglass rod is under tension and must be removed carefully to avoid injury.
2. Reach inside the Tent Chair Blind and grab the two (2) steel sleeves on the rear "backrest" loop. Slide these sleeves up above the pivoting joint to release the rear "backrest" loop and allow this loop to fold over and behind the chair.
3. Now you can gather the "armrest" loops and allow them to fold over and behind the chair.
4. While standing in front of the chair, grab each armrest and fold chair and blind together.
5. Using the attached nylon strap, secure the Tent Chair in the "folded" position before attempting to place it inside the carrying bag.

SUGGESTIONS:

1. Always inspect the joints, rivets, and screws used to assemble the Tent Chair prior to each use.
2. Never use the Tent Chair with parts missing or broken.
3. Never store your Tent Chair wet or moist--allow the tent to dry out before closing or storing.
4. Uneven ground can weaken or stress the steel frame of the chair.

THANK YOU AND ENJOY!!!

FARGASON OUTDOOR TECHNOLOGIES, INC.
P.O. Box 36635, Birmingham, AL 35236
1-800-828-1554, www.tentchair.com